

OPERATION
AND
SERVICE MANUAL

CAL LAB
HARRIS TECHNICAL SERVICES
3888 Calle Fortunada, Ste. A
San Diego, CA 92123



INDUSTRIES, INC.

403



WARRANTY

TELONIC INSTRUMENTS AND ACCESSORIES

Products manufactured by TELONIC INDUSTRIES, INC. are guaranteed against defective materials and workmanship for a period of one year (vacuum tubes excepted) from date of purchase. This warranty does not apply to instruments that have been altered, improperly handled or damaged in any way beyond our control.

Instruments must be examined immediately upon receipt, since claims for damage in transit will not be honored by the carrier unless prompt action is taken.

CHANGES IN SPECIFICATIONS

The right is reserved to change the published specifications of equipment at any time, and to furnish merchandise in accordance with current specifications, without incurring any liability to modify equipment previously sold.

RETURNING EQUIPMENT TO FACTORY

Factory service is available for repair and readjustment of this instrument. However, a description of the trouble, plus the MODEL AND SERIAL NUMBERS of the unit should be forwarded FIRST, whereupon instructions for correcting the trouble OR authorization for returning the equipment will be given. This applies to all units, whether under warranty or not.

MODEL L-6
L-6M

T.O.S. No. 106
SERIAL NO. A16018
PLUG IN OSCILLATOR

Telonic

INDUSTRIES, INC. BEECH GROVE, INDIANA

CONTENTS

Page

SECTION I .. SPECIFICATIONS

SPECIFICATIONS	1
----------------	---

SECTION II .. OPERATING INSTRUCTIONS

TYPICAL SETUP	2
DRAWING OF FRONT PANEL	2
GENERAL	3
DRAWING OF REAR PANEL	3
DESCRIPTION OF REAR PANEL	3

SECTION III .. GENERAL DESCRIPTION

GENERAL	4
SWEEP OSCILLATOR	4
VARIABLE MARKER	4

SECTION IV .. CALIBRATION PROCEDURE

TYPICAL SETUP	6
GENERAL PROCEDURE	7
CHASSIS LAYOUT	8
CENTERING	9
SWEEP WIDTH	9
LINEARITY CHECK	10
LEVEL LIMITS	11
FLATNESS CHECK	11
VARIABLE MARKER	12

SECTION V .. MAINTENANCE

GENERAL PROCEDURE	13
EXTENSION CABLE	13
ACCESS TO RF COMPARTMENT	13
TROUBLE SHOOTING CHART	14

SECTION VI .. PARTS LIST

ABBREVIATION CODE	17
PARTS LIST FOR SWEEP OSCILLATOR SECTION	17
PARTS LIST FOR VARIABLE MARKER	18

SECTION VII .. SCHEMATIC DIAGRAMS

CONVERSION INFORMATION

Commencing with equipment shipped after about July 22, 1963, certain modifications have been incorporated in the Telonic SM-2000 plug-in series, and in the Telonic SM-2000 control chassis. These modifications may render the units incompatible with those previously shipped unless the earlier instruments are modified also. The equipment in which these modifications have been made can be identified by the letter 'A' prefixed to the serial number.

Units not so identified must be modified if they are to be compatible with instruments now being shipped. The modifications to be made are listed below, divided into two groups - those to be made to earlier SM-2000's and those to be made to earlier plug-ins.

SM-2000 CHANGES

1. On J601, remove all wires presently connected to pin 8 and reconnect them at pin 7; remove the jumper between pins 7 and 8.
2. Using shielded wire, type RG-174/U or equal, connect pin 8 of J601 to the printed circuit board land which leads to pin 1, V303. Ground the shield by connecting it to a convenient ground land nearby.
3. Prefix the letter 'A' to the serial number of the instrument.

PLUG-IN CHANGES

1. On P601 remove all wires presently connected to Pin 8 and reconnect them at pin 7; remove the jumper between pins 7 and 8 if one is connected.
2. Prefix the letter 'A' to the serial number of the instrument, if none is prefixed.

Changing the serial number of the instrument is as important in the modification as are the electrical requirements, as the ability to identify a unit as having been or not having been modified is involved.



Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_07910

SECTION I .. SPECIFICATIONS

MODELS L-5, L-6, L-7, L-5M, L-6M, and L-7M

INTRODUCTION

The L-5, L-6, and L-7 are plug-in sweep oscillator units for use with the Telonic Models SM-2000 and SM-2000-1 control chassis. These plug-ins utilize the special functions of the control chassis such as choice of sweep/retrace ratio, variable sweep rate, and manual or external sweep.


The L-5M, L-6M, and L-7M include a variable marker covering the entire swept frequency range. This difference is clearly indicated throughout the manual.

SPECIFICATIONS

	<u>L-5,</u> <u>L-5M</u>	<u>L-6,</u> <u>L-6M</u>	<u>L-7,</u> <u>L-7M</u>
CW AND SWEEP CENTER FREQUENCY RANGE	20-75 Mc	50-125 Mc	100-210 Mc*
SWEPT FREQUENCY RANGE	16-88 Mc	43-142 Mc	88-230 Mc*
SWEEP WIDTH	0.1-40%	0.1-30%	0.1-25%
OUTPUT VOLTAGE	1v r.m.s.	1v r.m.s.	0.75v r.m.s.
FLATNESS	±0.25 db	±0.25 db	±0.25 db
LINEARITY			
At sweep width indicated not over	- - - -	20%:1.2:1	10%:1.2:1
At maximum specified sweep width not over	1.2:1	1.5:1	1.5:1
VERNIER LEVEL CONTROL RANGE	0-6 db	0-6 db	0-6 db
VARIABLE MARKER (L-5M, L-6M, L-7M only)			
Frequency range	16-88 Mc	37-150 Mc	88-240 Mc
Accuracy	±0.35%	±0.25%	±0.25%

* When operating in the SM-2000

SECTION II .. OPERATING INSTRUCTIONS

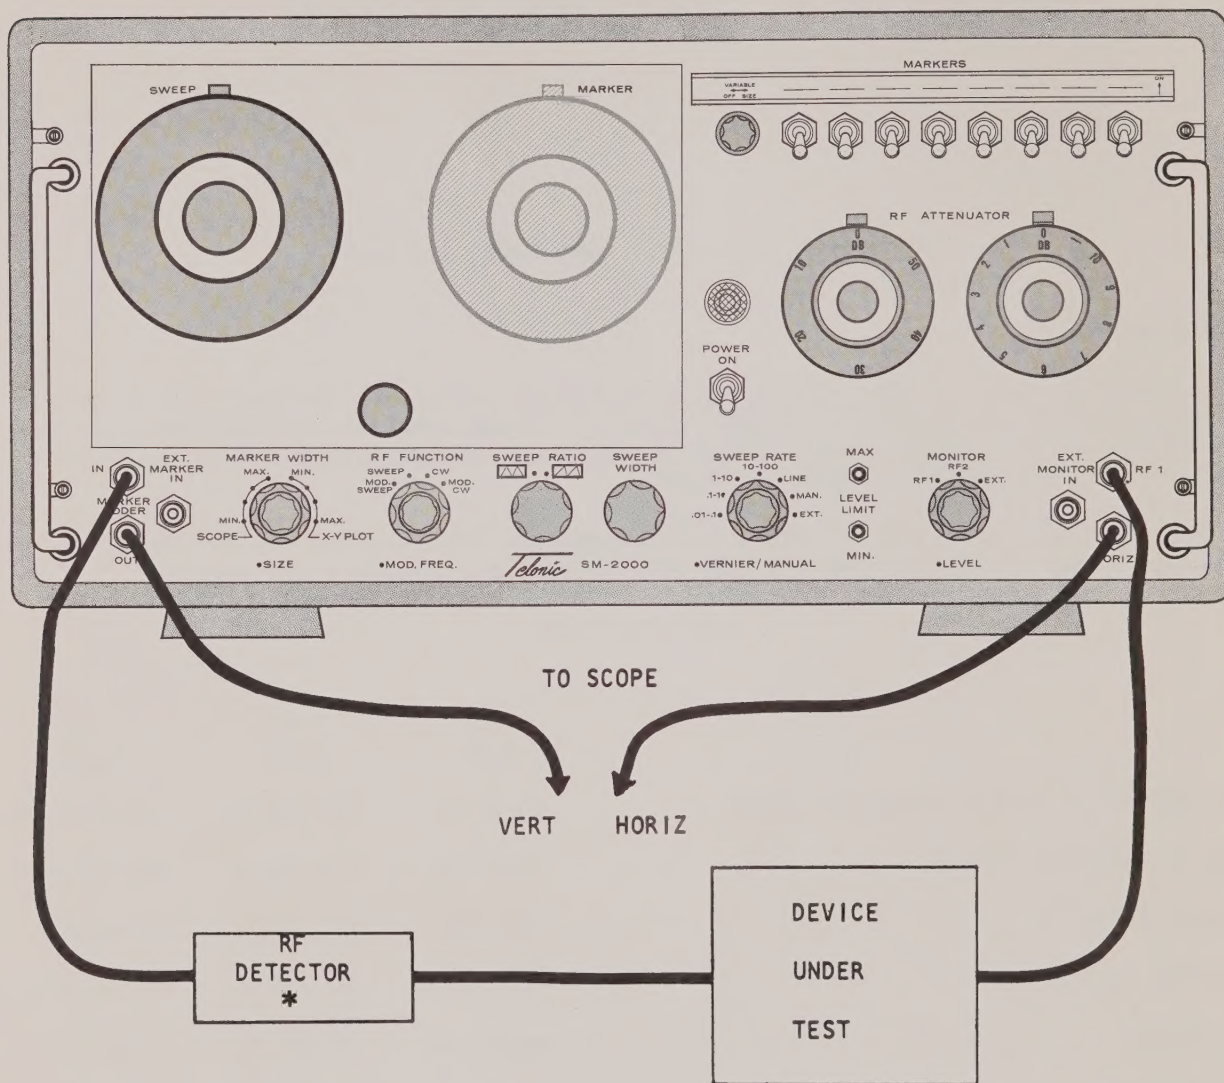

*The Telonic XD-3A or XD-8A is suitable for this use in a 50Ω system. The XD-4A or XD-9A is recommended in a 75Ω system.

DESCRIPTION OF FRONT PANEL


The front panel contains two controls (one only if variable marker is not installed).

- SWEEP** The Sweep Dial, which sets the center frequency of the sweep oscillator by means of a variable capacitor.
- MARKER** The Variable Marker Dial, calibrated in two ranges to cover the full range of the unit. This control also adjusts frequency with a variable capacitor.

GENERAL

1. Make sure the control chassis power is OFF before inserting the plug-in oscillator into the control chassis. If the power is ON, transient voltages may damage diodes in the units. Insert plug-in oscillator and secure it in the chassis by tightening the fastening rod with the knob in the lower center of the front panel.
2. Make connections to the scope (or recorder), the device under test, and RF Detector as shown. All connectors located on the sweep generator are BNC type and it is recommended that RG cable be used for all connections. This insures good ground connection between the devices and minimizes hum, radiation from the unit, and pickup of spurious external signals. The cable that is used to connect RF 1 to the device under test should match the impedance of the sweep generator, or else a matching network should be used to insure a constant input signal.
3. Refer to the manual for the control chassis for additional instructions.
4. To insure proper operation refer to Section IV (CALIBRATION PROCEDURE).
NOTE: To insure a constant amplitude signal, the LEVEL LIMIT MAX and MIN controls on the control chassis should be set as prescribed in Section IV of this manual. This adjustment varies with the individual plug-in oscillator.
5. Proceed in accordance with recommendations of the manufacturer of the device under test concerning alignment, adjustment, and tests.

DRAWING OF REAR PANEL

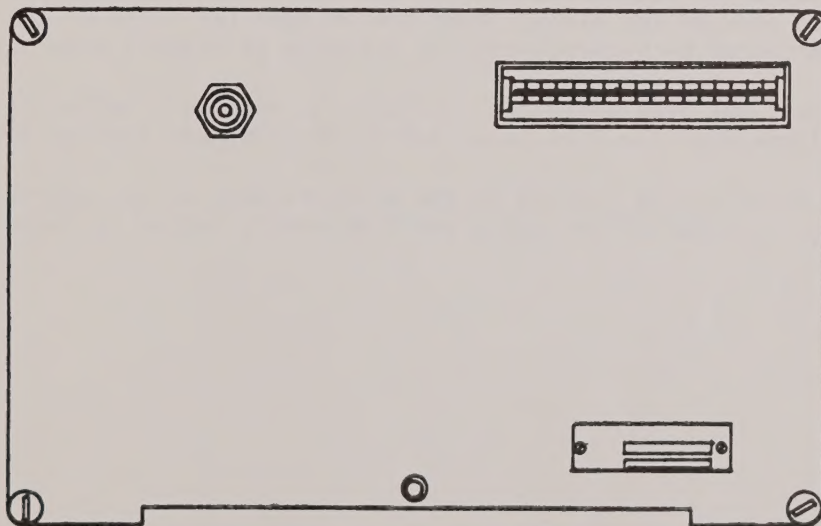

DESCRIPTION OF REAR PANEL

The two electrical connectors on the rear panel are:

A BNC plug, which mates with a BNC jack on the control chassis. This is the RF output connector.

A 32-contact plug which makes the other electrical contacts necessary through a mating socket on the control chassis.

SECTION III .. GENERAL DESCRIPTION

SWEEP OSCILLATOR

The sweep oscillator is a modified Colpitts circuit.

The frequency is swept with a triangular or sawtooth drive (from the control chassis) to a saturable reactor which controls the inductance in the oscillator tank circuit. The oscillator tank capacity is controlled by the front panel SWEEP frequency dial.

The output is leveled by a signal from the control chassis as explained in the manual for that unit.

VARIABLE MARKER (L-5M, L-6M, and L-7M only)


The variable marker is derived from heterodyning the fundamental or harmonic frequencies of a variable oscillator and the sweep oscillator. Each marker dial is calibrated over two ranges. The outer range represents the fundamental band of the variable oscillator, which is somewhat less than that of the sweep oscillator. The inner scales are calibrated at twice the fundamental, and the two scales together extend over the full swept range.

The diode mixer circuit which combines the signals from the two oscillators is also an effective harmonic generator. Thus there will be harmonics of both the sweep oscillator output and the variable c-w oscillator output present. In the upper part of the swept range the second harmonic of the c-w signal combines with the fundamental swept signal to produce the birdy. Over the fundamental range of the c-w oscillator the birdy is produced by heterodyning the fundamental signals from both oscillators.

The mixer circuit has been optimized carefully to produce a marker of approximately constant amplitude over the full range and to discriminate against spurious markers.

The output of the mixer is coupled to the birdy-by-pass marker system on the control chassis through a filter which limits the frequencies passed to those required for a birdy marker.

SECTION IV .. CALIBRATION PROCEDURE

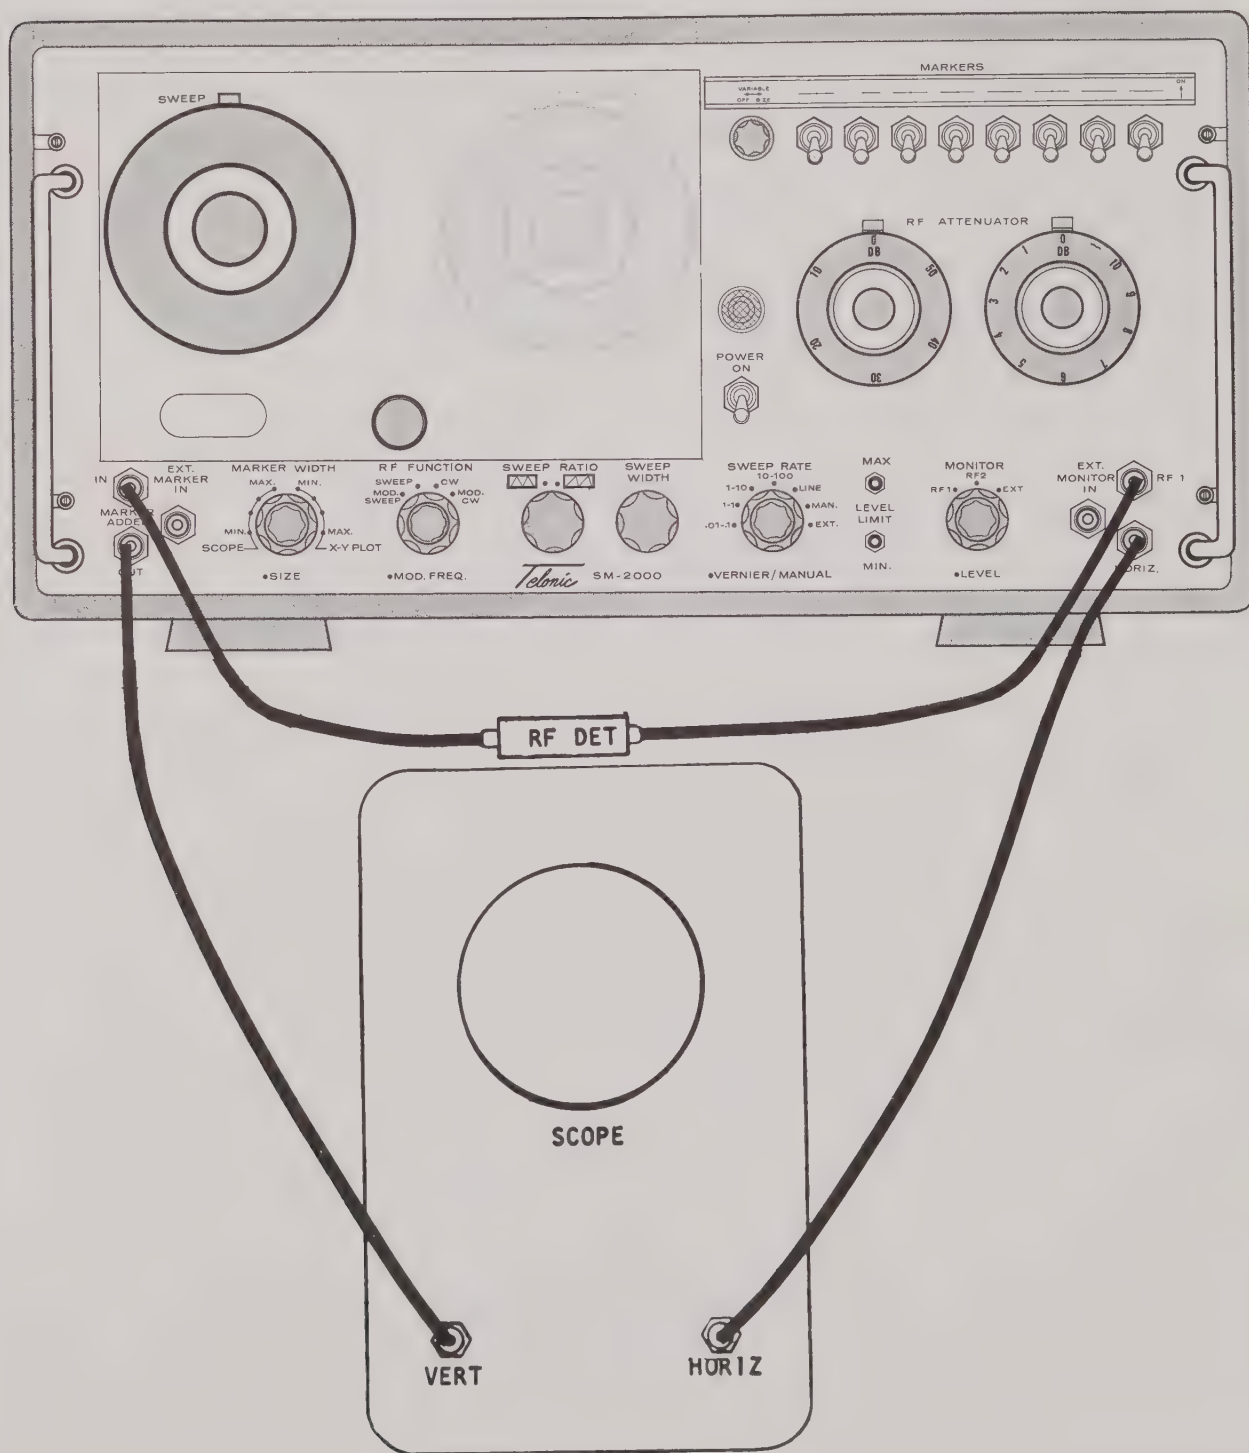

TYPICAL SET UP

GENERAL

The following procedure should be applied after changing any component in the plug-in, or at any time the calibration is noted to be incorrect.

Complete calibration of the plug-in involves adjustment of three different classes of controls.

Those located in the plug-in which affect the operation of the control chassis.

Those located in the plug-in and affecting plug-in functions only.

Those located in the control chassis which affect the operation of the plug-in.

The latter class of controls is discussed in the manual for the control chassis. The others are treated here.

NOTE: Although preliminary adjustments may be made with the cover removed from the oscillator section, final adjustment requires that the cover be in place. Holes are provided in the box for access to C802 and L801. See chassis layout on next page for location of access holes.


TEST EQUIPMENT REQUIRED:

In addition, crystal-controlled harmonic markers, such as the Telonic "CDH" series, are required. A CDH-10 and a CDH-1.0 are recommended for the L-5 and a CDH-50, CDH-5.0 and CDH-2.0 for the L-6 and L-7.

PROCEDURE

1. Make connections as shown on page 6. Observe the instructions contained in Section II concerning type of cable.
2. With power OFF, insert the plug-in and secure it in place.
3. Turn power ON, allow a 15 minute warmup period, and make adjustments as outlined.


CALIBRATION PROCEDURE

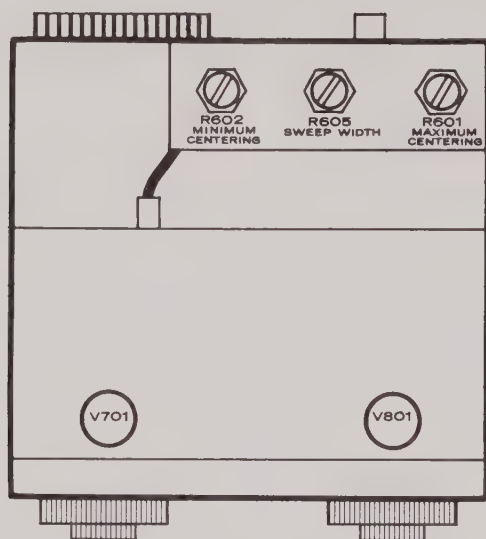

CHASSIS LAYOUT (TOP VIEW)



P601

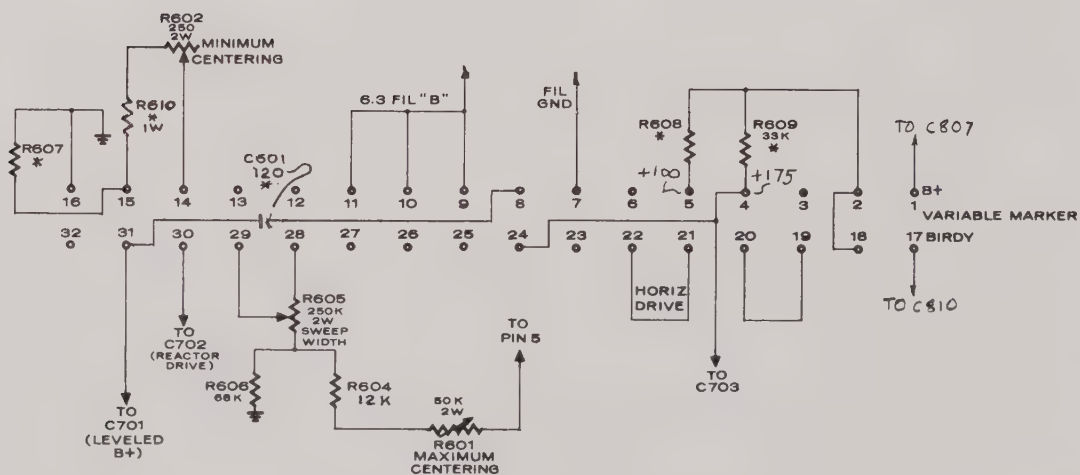

L-5M
L-6M

CALIBRATION PROCEDURE

MIN CENTERING (Adjustment)

The MIN CENTERING is set for optimum dial accuracy at minimum sweep width.

Set the front panel SWEEP WIDTH control near minimum. Turn on the 10-Mc harmonic marker for the L-5, or the 50-Mc marker for the L-6 and L-7. Turn off the variable and all other markers.

Set the SWEEP dial on the L-5 to 20 Mc or on the L-6 or L-7 to 100 Mc.

Locate the harmonic marker corresponding to the SWEEP dial setting and adjust MIN CENTERING to center the marker on the trace. Decrease the sweep width slowly to minimum, maintaining the center of the marker in the center of the trace with the MIN CENTERING control.

Similarly check the dial at other frequencies of interest adjusting MIN CENTERING to divide errors if necessary. If preferred, this control may be set instead to provide best dial accuracy at a critical frequency.

MAX CENTERING (Adjustment)

This control is set for equal sweep on each side of center frequency. Rotate the front panel SWEEP WIDTH control fully clockwise.

Set the SWEEP dial on the L-5 to 50 Mc, on the L-6 to 100 Mc, or on the L-7 to 160 Mc. Turn on the 1-Mc harmonic marker for the L-5, or the 5-Mc marker for the L-6 or L-7. Be sure all other markers are turned off (the 10-Mc or 50Mc marker may be used to identify the 1-Mc or 5-Mc harmonics, then turned off).

Adjust MAX CENTERING so that the marker corresponding to the dial setting is centered on the trace.


SWEEP WIDTH (Adjustment)

This adjustment is set to provide the specified maximum sweep width. These plug-ins have an essentially constant percentage of sweep width over the full range, and the frequency at which the sweep width adjustment is made can be chosen for a convenient marker display.


Leave the controls set as above. When the plug-in SWEEP WIDTH control is set properly, there will then be 21 markers on the L-5 display, 7 on the L-6, or 9 on the L-7. Alternately adjust the sweep dial and sweep width control until the two outer markers are at the exact ends of the trace. See photographs on following page.

NOTE: The SWEEP dial is calibrated at minimum sweep width and, at the conclusion of this adjustment, may not read the exact frequency originally set.


Now readjust MAX CENTERING, then MIN CENTERING, as above if necessary to recalibrate this mark on the SWEEP dial.

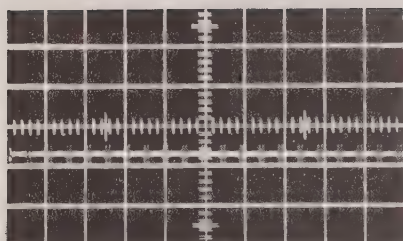

L-5

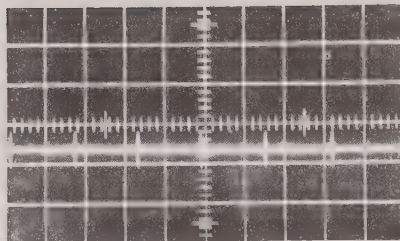

L-6

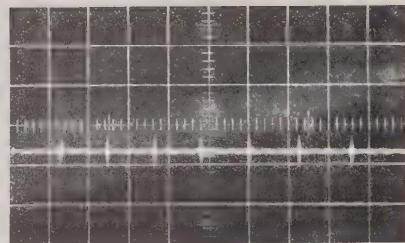

L-7

LINEARITY

Linearity measurements are made over the center 80% of the display at maximum sweep width.


With other controls set as above turn on the 5-Mc harmonic marker for the L-7, the 2-Mc harmonic markers for the L-6, or the 1.0-Mc harmonic markers for the L-5. Turn off all other markers. Set the SWEEP dial for a center frequency which will allow 10 marker intervals to occupy the full trace and adjust the horizontal gain of the oscilloscope for a 10 cm trace.

Locate the shortest and longest marker interval in the center 80% (8 cm) of the oscilloscope trace. Readjust the horizontal gain of the oscilloscope so that the shortest interval occupies exactly 1 cm. See photograph on the left below.


Adjust the position of the trace so that the longest marker interval begins on a graticule line and measure the length of the interval. See photograph on the right below.

Its length in centimeters indicates the linearity ratio: a length of 1.15 cm for the longest marker interval represents a linearity of 1.15:1.

Linearity can be checked at other sweep widths, such as 40%, by analogous methods using either the same or other harmonic markers.

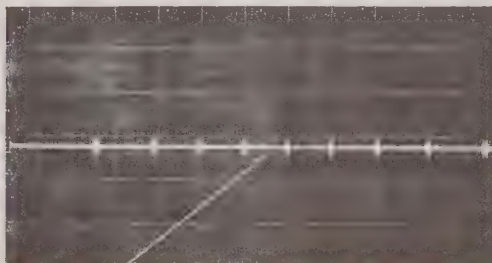

Shortest marker interval

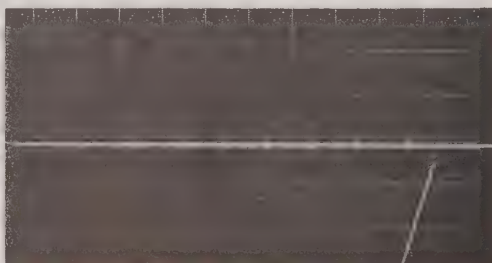

Longest marker interval

LEVEL LIMIT (MAX and MIN) (Control Chassis)

Preset the following controls on the control chassis:

- LEVEL fully clockwise
- SWEEP WIDTH fully clockwise
- MONITOR in RF 1 position
- SWEEP RATE to LINE

Set the output level at the specified value with the MAX LEVEL LIMIT. Considering the efficiency of the XD-3A at this level and frequency, 1.0v rms corresponds to an XD-3A d-c output of about 1.1v, and 2 volts peak-to-peak corresponds to about 0.75v d.c. Insert fixed attenuation, not to exceed 6 db, in an amount equal to the desired range of the LEVEL Control and note the output level. Reset the attenuators to 0 db, and rotate the LEVEL Control fully counter-clockwise. Adjust MIN LEVEL LIMIT for the same output noted with 6 db fixed attenuation.

FLATNESS CHECK

Flatness is measured over the entire swept range of the plug-in; in this range, the minimum output must be not more than 0.5 db lower than the maximum output at any frequency setting.

Preset the following controls:


- SWEEP WIDTH fully clockwise
- LEVEL fully clockwise
- All markers OFF
- MONITOR SELECTOR to RF 1

NOTE: Be sure that LEVEL MAX and MIN Controls are adjusted as prescribed above.

Rotate the SWEEP Dial through its calibrated range, noting the maximum and minimum outputs.

CALIBRATION PROCEDURE

Compare the difference between these outputs with the reduction in output resulting from the insertion of 1 db attenuation. The difference between the maximum and minimum must be no greater than half the change caused by the 1 db attenuation.

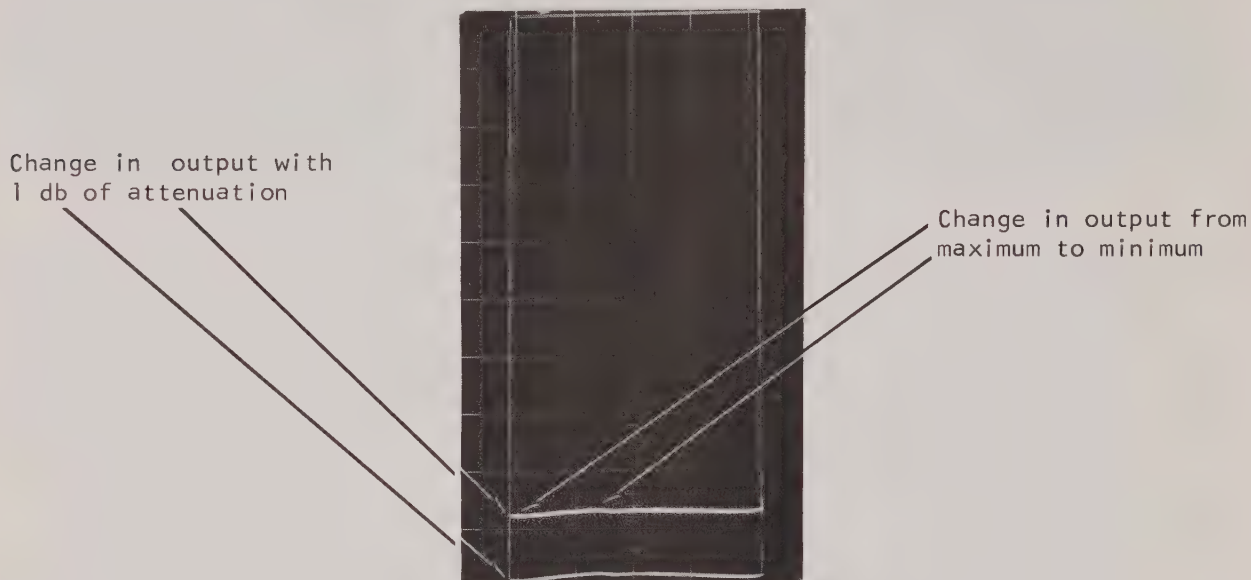

VARIABLE MARKER (Adjustment)

This procedure is provided primarily to restore the dial accuracy after a component in the marker circuit is changed.

NOTE: Refer to chassis layout on page 8 for location of C802* and L801. These adjustments are made with the cover ON.

Preset the following controls:

Control Chassis

SWEEP WIDTH to approximately 10%

LEVEL to maximum

50-Mc or 10-Mc Marker ON

5-Mc or 1-Mc Marker ON

*C802 IS THE CIRCUIT REFERENCE SYMBOL FOR THE TRIMMER CAPACITOR IN THE L-5 AND L-6. THIS PART IS C804 IN THE L-7.

Plug-in

SWEEP Dial and MARKER Dial to the lowest frequency calibrated on outer scale of MARKER Dial.

Adjust L801 to superimpose the variable marker over the crystal-controlled marker at this frequency.

Reset the plug-in SWEEP and MARKER dials to the highest frequency calibrated on the outer scale of the MARKER dial.

Adjust C802* to superimpose the variable marker over the crystal-controlled marker at this frequency.

Repeat the above procedures until the markers are superimposed at each end of the frequency range each time the dials are set as prescribed. If preferred, dial errors can be divided over the full range instead, or a critical frequency can be favored with best accuracy.

SECTION V

MAINTENANCE

GENERAL PROCEDURE

Since this model is a plug-in unit, many of the possible malfunctions of the oscillator are the result of part failure in the control chassis. The connections at P601 of the plug-in and at J601 of the control chassis afford a convenient means of tracing the source of troubles to the oscillator or chassis.

In locating troubles which have been traced to the oscillator, application of the common rules of electronic maintenance, including a visual check for damage, open filaments, glowing anodes, shorted tuning capacitors, and charred resistors, is an obvious measure. All connectors, particularly P601 and J601, should be checked for cleanliness.

EXTENSION CABLE

For maintenance work requiring access to parts located on the under side of the plug-in, or in other areas not easily reached, an extension cable may be obtained from Telonic Industries, Inc. This cable, having the 32-contact plug on one end and the 32-contact jack on the other, allows the plug-in to be removed from the control chassis and operated on the bench.

ACCESS TO R-F COMPARTMENT

There are four unlacquered screws on the cover to the r-f compartment. Only these should be removed in taking off the cover.

The lacquered screws hold the shield in place and have nothing to do with securing the cover.

MAINTENANCE

The following chart will be of service in deciding control chassis. It is assumed that the procedures jumpers on P601 are intact. Where "inconclusive"

SYMPTOM	CHECK (on P601)
Weak or no output or unlevelled output	DC voltage at Pin 31 with RF LEVEL fully clockwise
No sweep width	1. Voltage waveform, Pin 14 to ground.
	2. Next - resistance between Pins 14 and 15, 28 and 29, 30 and 4 with plug-in removed.
Changing sweep width also changes center frequency	Resistance from Pin 28 to Pins 5, 29, and 16 with plug-in removed.
No variable marker	1. For birdy at Pin 17
	2. DC voltage at Pin 1

If the chart shows that the trouble probably is in the control chassis, refer to the Maintenance Section of the manual for that unit.

If the trouble appears to be in the plug-in, the following chart may be of assistance in localizing the failure:

SYMPTOM	CHECK
Weak or no output or unlevelled output	V701 and associated circuitry. Continuity from Pin 31 of P601 to Pin 1, 6, or 7 of V701.
No sweep width	Check R602, R603, R605, and L701A.
Changing sweep width changes center frequency	Check R601, R604 and R606 first for open, second for changed value.
No variable marker	Check V801 and associated circuitry, including sweep sample line. Change diode in mixer circuit and check other mixer components.
Weak Marker	Diode in mixer circuit. V801 and associated circuitry. Sweep sample line. If markers on one range are considerably more prominent than those on another, substitute diodes to optimize all.
Spurious Markers	Check mixer diode and change if necessary. Be sure diode is inserted with correct polarity.

whether a trouble lies in the oscillator or on Page 13 have been applied and that the is shown, the next step should be followed.

IF RESULT IS	TROUBLE PROBABLY IN	
	OSCILLATOR	CONTROL CHASSIS
High 100-175v	x	
Low or zero 0-100v		x
Sawtooth or triangular waveform 0V or DC voltage	x Inconclusive - see check #2	
Open on any check	x	
Continuity		x
Open on any check	x	
Continuity		x
Birdy present		x
No birdy	Inconclusive - see check #2	
100V	x	
Low or no voltage		x

SCHEMATIC PART DESIGNATION

C Capacitor
 CR Semiconductor diode
 J Jack
 L Inductor
 P Plug
 R Resistor, Fixed or Variable
 V Tube

SCHEMATIC VALUE ABBREVIATION

Ω ohms
 K 1,000 kilohms
 M 1,000,000 ohms (megohms)
 μ f Microfarad
 pf Picofarad
 μ h Microhenry
 mh Millihenry

OTHER ABBREVIATIONS

F.P. Front Panel
 R.P. Rear Panel
 T.P. Test Point

RESISTORS - All resistors are 1/2 watt, $\pm 10\%$, and are shown in ohms, unless otherwise specified.

CAPACITORS - All capacitors are shown in picofarads (pf) unless otherwise specified.

COILS - All inductors are shown in microhenries (μ h) unless otherwise specified.

CIRCUIT REFERENCE SYMBOL - LOCATION INFORMATION

601 - 699	Interconnecting elements	701 - 799	Sweep Oscillator
		801 - 899	Variable Marker

* Indicates value of component adjusted at factory, and may deviate from value shown on print.


SECTION VI .. PARTS LIST

PARTS LIST (L-5, L-6, L-7)			VARIABLE MARKER PARTS LIST (L-5M, L-6M, L-7M ONLY)		
CIRCUIT REF.	DESCRIPTION	TELONIC PART NO.	CIRCUIT REF.	DESCRIPTION	TELONIC PART NO.
C601	CFC (SC)	NA	C801	CVA, 140pf	C-422
C701			C802		
L-5	CFCF, 1000pf, +100-0%, 500VDCW	C-110	L-5M	CVC, 8.5pf	C-409
L-6	CFCF, 1000pf, +100-0%, 500VDCW	C-110	L-6M	CVC, 8.5pf	C-409
L-7	CVA, 40pf	C-424	L-7M	CFC, 75pf, ±10%, 1000VDCW	C-12
C702			C803		
L-5	Feedthru, low-capacity	MP-42	L-5M	CFC, 15pf, ±10%, 1000VDCW	C-7
L-6	Same as C701		L-6M	CFC, 20pf, ±10%, 1000VDCW	C-8
L-7	CFC, 15pf, ±10%, 1000VDCW	C-7	L-7M	Same as C802	
C703			C804		
L-5	Same as C701		L-5M	CFC, 0.01μf, +80-20%, 500VDCW	C-20
L-6	Same as C701		L-6M	Same as in L-5M	
L-7	CFCF, 1000pf, +100-0%, 500VDCW	C-110	L-7M	CVC, 8.5pf	C-409
C704			C805		
L-5	Same as C701		L-5M	CFCF, 1000pf, +100-0%, 500VDCW	C-110
L-6	CVA, 90pf	C-440	L-6M	Same as in L-5M	
L-7	Same as C703		L-7M	CFC, 15pf, ±10%, 1000VDCW	C-7
C705			C806		
L-5	Not used		L-5M	Same as C805	
L-6	Same as C701		L-6M	Same as C805	
L-7	Not used		L-7M	CFC, 0.01μf, +80-20%, 500VDCW	C-20
C706			C807		
L-5	Not used		L-5M	Same as C805	
L-6	Same as C701		L-6M	Same as C805	
L-7	Same as C703		L-7M	CFCF, 1000pf, +100-0%, 500VDCW	C-110
C707			C808		
L-5	CVA, 450pf	C-435	L-5M	Same as C805	
L-6	Same as C701		L-6M	Same as C805	
L-7	Same as C703		L-7M	Same as C807	
C708			C809		
L-5	Same as C701		L-5M	Same as C805	
L-6	Same as C701		L-6M	Same as C805	
L-7	Same as C703		L-7M	Same as C807	
C709			C810		
L-5	Same as C701		L-5M	Same as C805	
L-6	Not used		L-6M	Same as C805	
L-7	Same as C703		L-7M	Same as C807	
C710			C811		
L-5	Same as C701		L-5M	Same as C805	
L-6	Not used		L-6M	Same as C805	
L-7	CFC, 5pf, ±10%, 1000VDCW	C-4	L-7M	Same as C806	
C711			C812		
L-5	Same as C701		L-5M	Not used	
L-6	Not used		L-6M	CFC, 150pf, ±10%, 500VDCW	C-145
L-7	Same as C703		L-7M	Same as C807	
J701	RJ, BNC	J-7	C813		
P601	Plug, 32-contact	S-39	L-5M	Not used	
P701	PC, UG-88B/U	J-32	L-6M	CFC, 200pf, ±10%, 1000VDCW	C-16
P702	PC	J-27	L-7M	Same as C807	
L701			CR801	DS, 1N82	D-1
L-5	Reactor, saturable	09102	L801		
L-6	Reactor, saturable	09162	L-5M	IV	09112
L-7	Reactor, saturable	09105	L-6M	IV	09145
L702			L-7M	IV	34006
L-5	Not used		L802	IF, 55.5h	L-108
L-6	IF, 25.5h	L-113	L803		
L-7	IF, 2.2.5h	L-100	L-5M	IF, 4.7.5h, ±10%	L-105
L703			L-6M	Same as in L-5M	
L-5	IF, 2.2μh	L-100	L-7M	IF, 2.2μh	L-100
L-6	IF, 2.2μh	L-100	L804	IF, 2.2.5h, ±10%	L-101
L-7	Not used		R801	RFC, 2.2KΩ, ±10%, 1/2W	R-20
L704	IF, 4.7.5h, ±10%	L-105	R802	RFC, 51Ω, ±5%, 1/2W	R-3
(L-7 only)			(L-7M only)		
L705	IF, 2.2μh, ±10%	L-101	R803		
(L-7 only)			L-5M	RFC, 220Ω, ±10%, 1/2W	R-39
L736	Same as L705		L-6M	RFC, 51Ω, ±5%, 1/2W	R-3
(L-7 only)			L-7M	Not used	
R601	RVC, 50KΩ, 2W	R-751	R804	Not used	
R602	RVC, 250Ω, 2W	R-771	R805		
R603	Not used		L-5M	RFC, 8.2KΩ, ±10%, 1/2W	R-43
R604	RFC, 12KΩ, ±10%, 1/2W	R-119	L-6M	Same as in L-5M	
R605	RVC, 250KΩ, 2W	R-752	L-7M	RFC, 3.3KΩ, ±10%, 1/2W	R-70
R606	RFC, 68KΩ, ±5%, 1/2W	R-51	R806		
L-5	SC		L-5M	RFC, 47KΩ, ±10%, 1/2W	R-2
L-6	SC		L-6M	RFC, 10KΩ, ±10%, 1/2W	R-23
L-7	Not used		L-7M	Same as in L-6M	
R607	SC		V801	TE, 60Z4	TE-5
R608	RFC, 33KΩ, ±10%, 1/2W (SC)	R-36			
R609	SC				
L-5	Not used				
L-6	Not used				
L-7	SC				
R610	RFC, 2.2KΩ, ±10%, 1/2W	R-20			
R611	RFC, 2.2KΩ, ±10%, 1/2W	R-20			
R612	RFC, 8.2KΩ, ±10%, 1/2W	R-23			
R613	RFC, 39KΩ, ±10%, 1/2W	R-26			
R614	RFC, 39KΩ, ±10%, 1/2W	R-26			
R615	RFC, 5.6Ω, ±5%, 1/2W	R-26			
R616	RFC, 5.6Ω, ±10%, 1/2W	R-26			
R617	Not used				
R618	Same as R703				
R619	Same as R703				
R620	RFC, 39KΩ, ±10%, 1/2W				
TE, 6E5E					
TE, 6E5E					
TE, 60Z4					



ABBREVIATION CODE

CFC	Capacitor, fixed, ceramic
CFCF	Capacitor, fixed, ceramic feedthru
CVA	Capacitor, variable, air
CVC	Capacitor, variable, ceramic
IF	Inductor, fixed
IV	Inductor, variable
Not ass. chd	Not associated
Plug, cap. e	Plug, capacitor
Restor. fixed, composition	Restoration, fixed, composition
Receptacle, jack	Receptacle, jack
Resistor, variable, composition	Resistor, variable, composition
Subject to change	Subject to change

CALIBRATION PROCEDURE

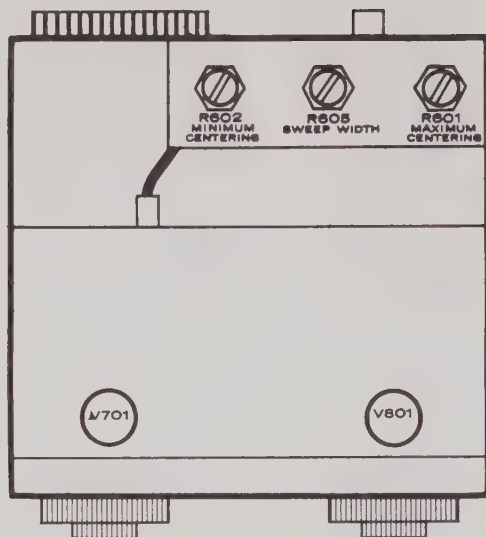


CHASSIS LAYOUT (TOP VIEW)

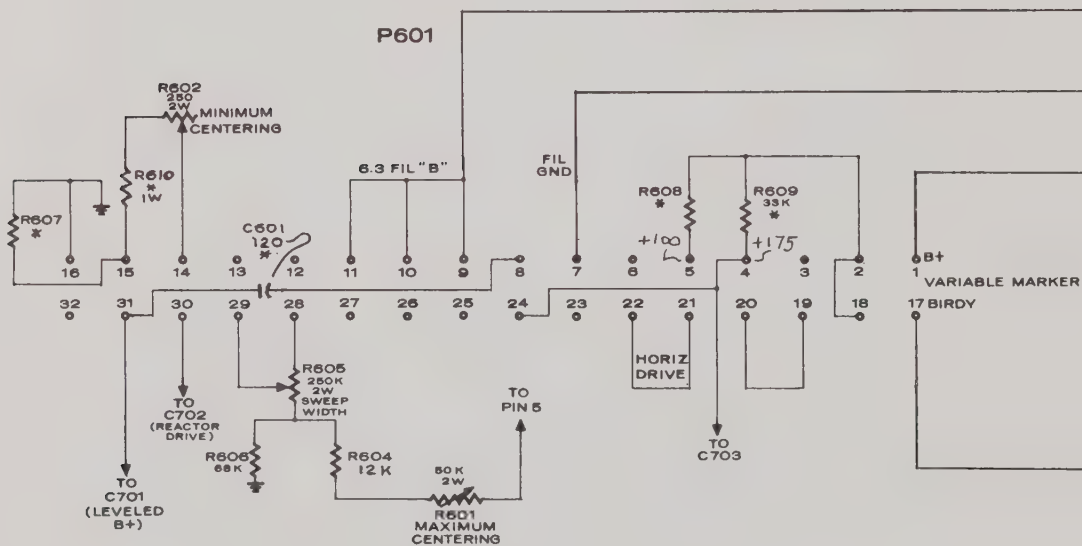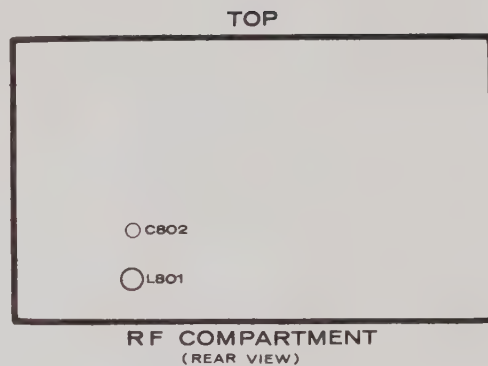

L-5 M,
L-6 M

25712
5164

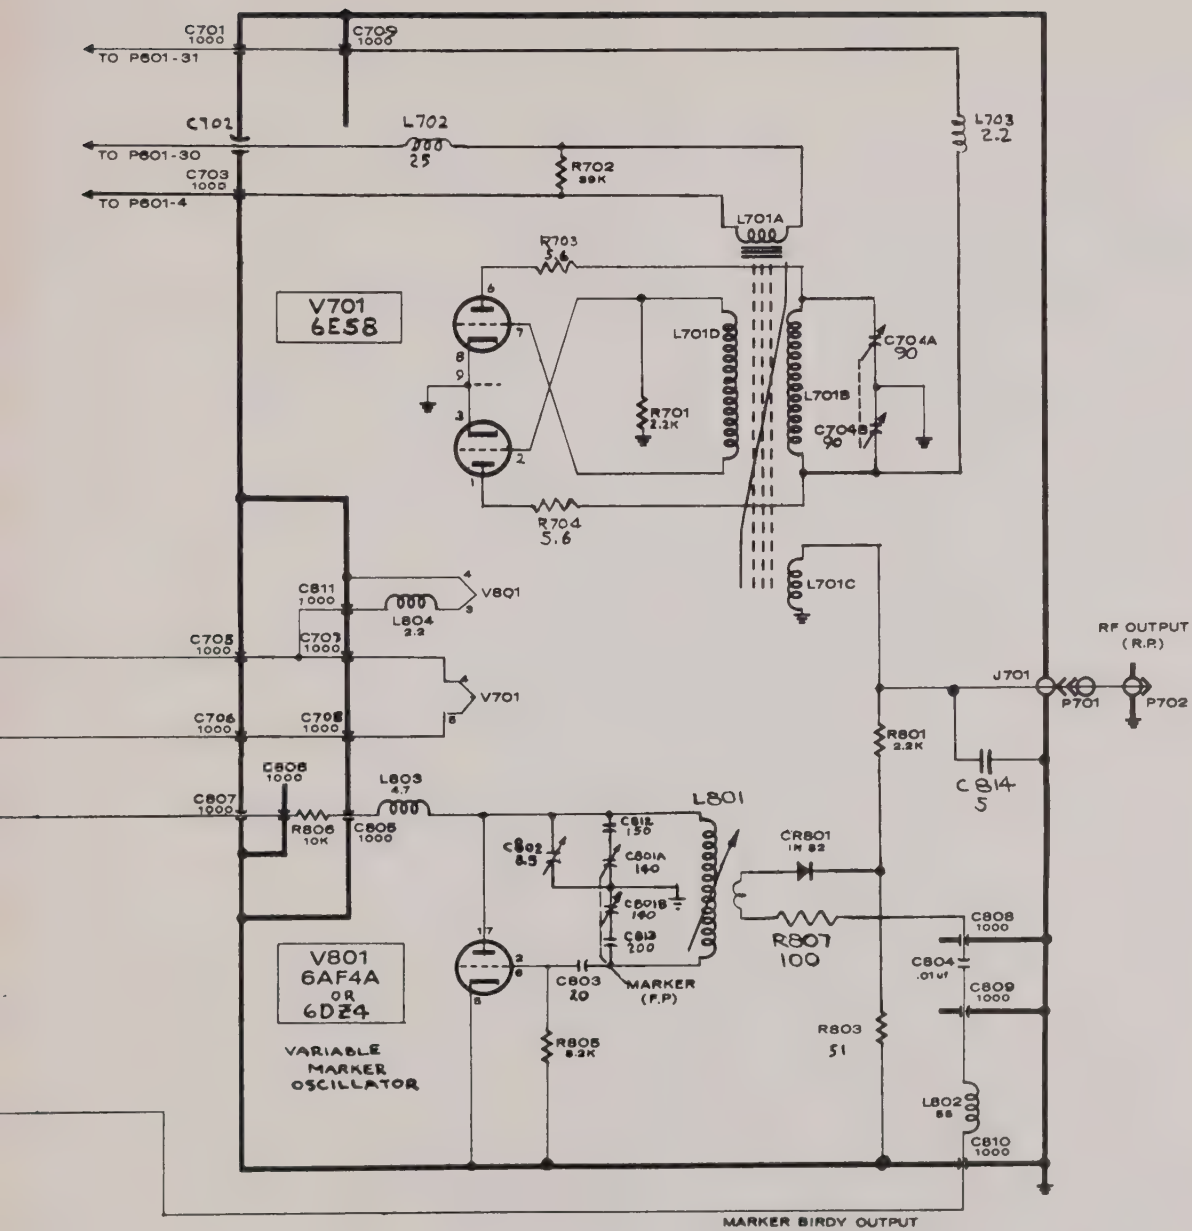

L 6 M

SA003-0107
REV. "5"

ADDENDUM SHEET

MODEL E-3/E-3M PLUG-IN OSCILLATOR INSTRUCTION MANUAL

The following changes shall be considered a part of this manual;

Page 17, Parts List

Add Circuit Reference: C603

Under Description - Add: CFD, .005 μ f

Under Telonic Part No. - Add: C-49

Circuit Reference R601:

Under Description - change from: RVC, 50K Ω , $\pm 10\%$, 2W
to read: 50K Ω , $\pm 10\%$, 0.2W

Under Telonic Part No. - change from: R-751
to read: R-725

Circuit Reference R602:

Under Description - change from: RVC, 10K Ω , $\pm 10\%$, 2W
to read: RVC, 10K Ω , $\pm 10\%$, 0.3W

Under Telonic Part No. - change from: R-767
to read: R-740

ABBREVIATION CODE

Add between first and second item from top: CFD capacitor, Fixed, Discap.

Page 17, Parts List (Effective with Serial No. A14907)

Add circuit Reference CR702:

Under Description - Add: DSD, 1N831

Under Telonic Part No. - Add: D-49

Add Circuit Reference R707:

Under Description - Add: RFC, 120 Ω , $\pm 10\%$, 1/8W

Under Telonic Part No. - Add: R-1825

Circuit Reference R604: (Effective with E-3 unit SN 14913 and E-3M unit SN 14921)

Under Description - change from: RFW, 4 Ω , $\pm 5\%$, 5W
to read: RFW, 2 Ω , $\pm 5\%$, 5W

Under Telonic Part No. - change from: R-410
to read: R-422

Page 7, PROCEDURE, item 4. (Effective with Serial No. A14907)

Change from: 4. Turn power ON, allow 15 minute _____ outlined
to read: 4. Turn power ON, allow a 30 minute warmup period, and make
adjustments as outlined.

